




NO	PARTS LIST	NO	PARTS LIST	NO	PARTS LIST
1	POST	11	LEVER CONNECTOR	21	KEY SWITCH
2	EXTENDED POST	12	WRENCH BOLT	22	PUSH BUTTON SWITCH
3	LOCK COVER	13	LOCK SPACER	23	WIRE ROLLER
4	LOCK SHAFT	14	LOCK BLOCK	24	POWER UNIT
5	LOCK SPRING 1	15	SPRING PIN	25	ANTI-VIBRATED RUBBER
6	LEVER HANDLE	16	DOWN LIMIT SWITCH	26	UP LIMIT SWITCH
7	LEVER SHAFT	17	LOCK WIRE ROLLER	27	HEXA NUT
8	LOCK WIRE FIXTURE	18	LOCK WIRE ROLLER BRACKET	28	FLAT WASHER
9	LOCK SPRING 2	19	CONTROL PANEL	29	HEXA BOLT
10	E-RING	20	PILOT LAMP	30	UPPER SUPPORT BEAM

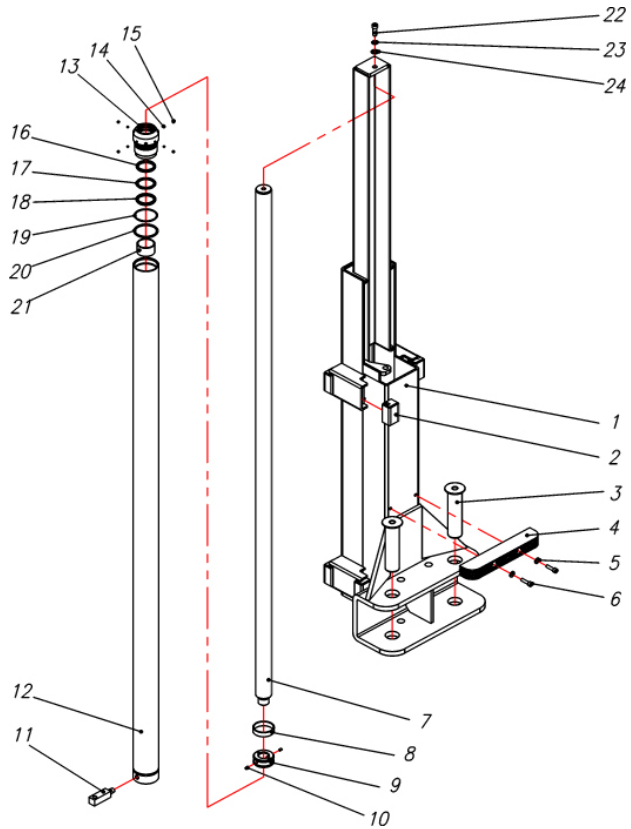

NO	PARTS LIST	NO	PARTS LIST	NO	PARTS LIST
1	CARRY	9	PISTON	17	BACK UP RING
2	CARRY GUIDE	10	LOCKING BOLT(M6)	18	U-PACKING
3	ARM SHAFT	11	HOSE ADAPTER	19	BACK UP RING
4	DOOR PROTECT RUBBER	12	CYLINDER	20	O-RING
5	FLAT WASHER(M8)	13	HEAD COVER	21	D.U BEARING
6	WRENCH BOLT(M8)	14	STEAL BALL	22	WRENCH BOLT(M10)
7	ROD BAR	15	LOCKING BOLT(M6)	23	SPRING
8	WEAR RING	16	DUST SEAL	24	FLAT WASHER(M10)

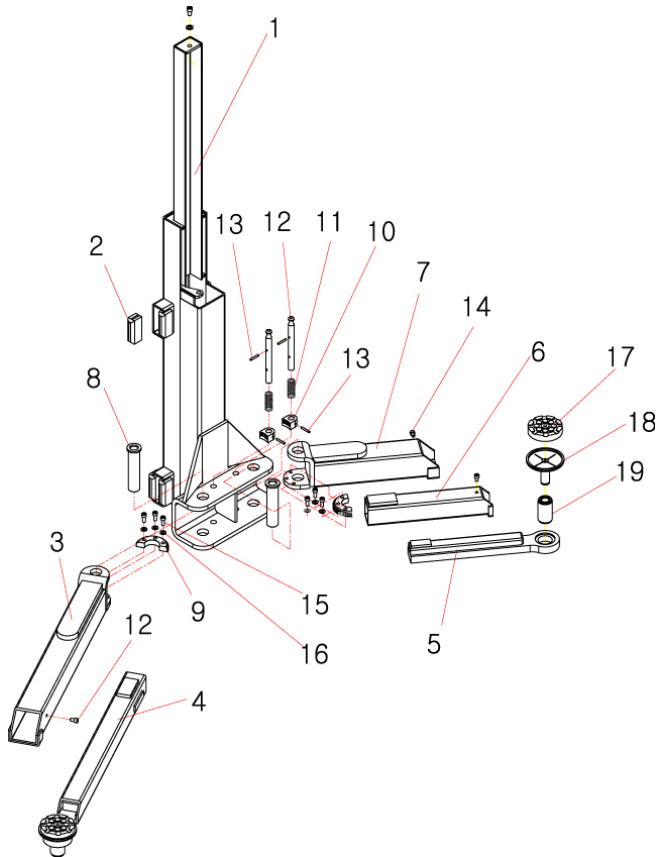

NO	PARTS LIST	NO	PARTS LIST	NO	PARTS LIST
1	CARRY	8	ARM SHAFT	15	HEXA BOLT
2	CARRY GUIDE	9	LARGE ARM LOCK GEAR	16	FLAT WASHER
3	LONG ARM	10	SMALL ARM LOCK GEAR	17	ARM SUPPORT RUBBER
4	LONG SLIDE ARM	11	ARM LOCK SPRING	18	ARM SUPPORTER
5	SLIDE ARM (3 rd)	12	GEAR SHAFT	19	ARM AND SUPPORTER
6	SLIDE ARM (2 rd)	13	SPRING PIN		
7	SHORT ARM	14	WRENCH BOLT		

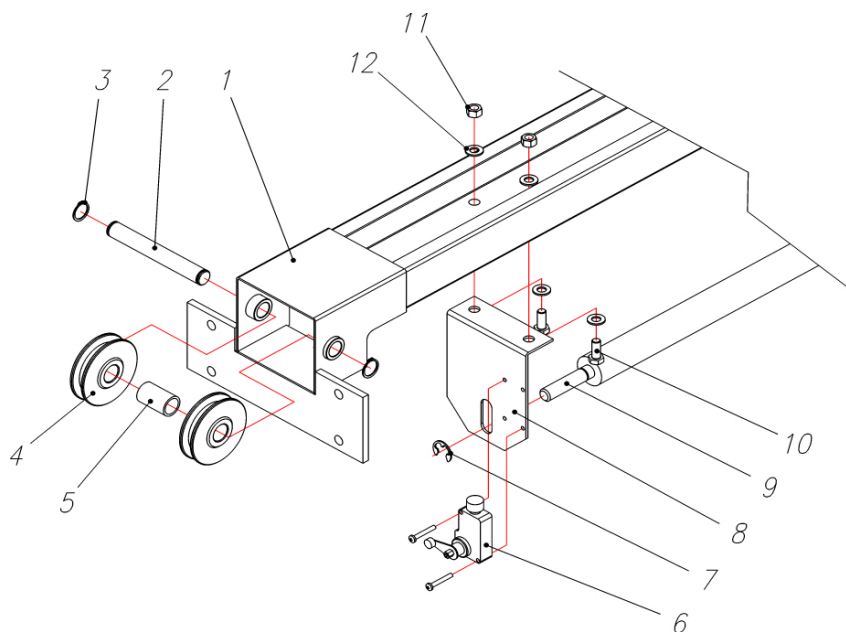

NO	PARTS LIST	NO	PARTS LIST
1	UPPER SUPPORT BEAM	7	E-RING
2	WIRE ROLLER SHAFT	8	LIMIT SWITCH FIXTURE
3	SNAP RING	9	UPPER LIMIT TOUCH BAR
4	WIRE ROLLER	10	HEXA BOLT
5	WIRE ROLLER SPACER	11	HEXA NUT
6	LIMIT SWITCH	12	FLAT WASHER